


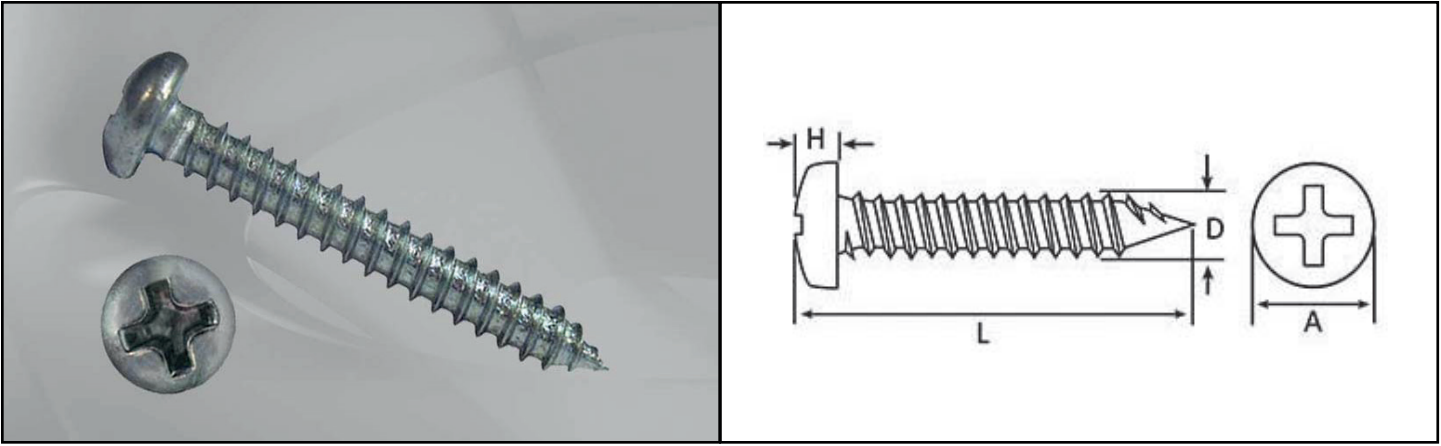

ROSCALATA CABEZA PAN RANURA PHILLIPS

Código	Diámetro	Largo “L”, pulg	Envase	Diám. “A” Cabeza, mm	Altura “H” Cabeza, mm	Diám. Perfor Piloto (mm)	Rango a Roscar (mm)	Torque Instalación (Nm)
Zincado Brillante								
03RLBP	#4	1/4	100 U	5,3	1,9	2.3 - 2.5	0.4 - 1.5	1,46
04RLBP		3/8						
05RLBP		1/2						
06RLBP		5/8						
07RLBP		3/4						
08RLBP	#6	1/4	100 U	6,6	2,3	2.7 - 3.0	0.4 - 1.9	2,7
09RLBP		3/8						
10RLBP		1/2						
11RLBP		5/8						
12RLBP		3/4						
13RLBP		1”						
14RLBP		1 1/4						
46RLBP		1 1/2						
47RLBP		2”						
15RLBP	#8	1/4	100 U	7,9	2,8	3.2 - 3.5	0.6 - 1.9	4,4
17RLBP		3/8						
18RLBP		1/2						
19RLBP		5/8						
20RLBP		3/4						
22RLBP		1”						
23RLBP		1 1/4						
24RLBP		1 1/2						
42RLBP		2”						
50RLBP		2 1/2						
51RLBP		3”						
25RLBP	#10	1/2	100 U	9,2	3,2	3.7 - 4.0	0.5 - 3.2	6,32
26RLBP		5/8						
27RLBP		3/4						
28RLBP		1”						
29RLBP		1 1/4						
30RLBP		1 1/2						
02RLBP		1 3/4						
43RLBP		2”						
52RLBP		2 1/2						
53RLBP		3”						
31RLBP	#12	1/2	100 U	10,5	3,7	4.3 - 4.8	0.6 - 3.2	9,94
32RLBP		5/8						
33RLBP		3/4						
54RLBP		7/8						
34RLBP		1”						
35RLBP		1 1/4						
36RLBP		1 1/2						
44RLBP		2”						
37RLBP	1/4	1/2	100 U	12,2	4,3	5.0 - 5.5	0.8 - 4.7	16
38RLBP		3/4						
39RLBP		1”						
40RLBP		1 1/4						
41RLBP		1 1/2						
45RLBP		2”						