


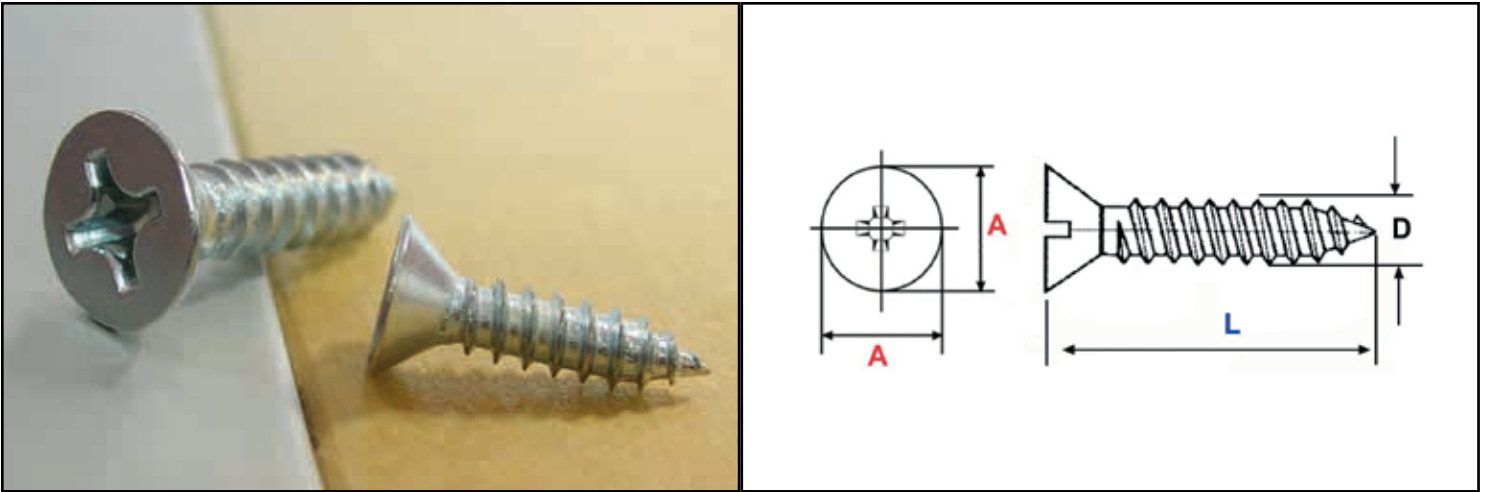

ROSCALATA CABEZA PLANA PHILLIPS

Código	Díam.	Largo “L”	Envase	Díam. “A” Cab. mm	Altura “H” Cab. mm	Díam. Perf. Piloto	# Punta Phillips	Torque Instalación (Nm)
Zincado Brillante								
01RLPP	#4	3/8	100	5,3	1,7	2.3 - 2.5	1	1,46
02RLPP		1/2						
03RLPP		5/8						
04RLPP		3/4						
11RLPP	#6	3/8	100	6,6	2,1	2.7 - 3.0	2	2,7
12RLPP		1/2						
13RLPP		5/8						
14RLPP		3/4						
15RLPP		1”						
16RLPP		1 1/4						
17RLPP		1 1/2						
21RLPP	#8	3/8	100	8,0	2,5	3.2 - 3.5	2	4,4
22RLPP		1/2						
23RLPP		5/8						
24RLPP		3/4						
26RLPP		1”						
27RLPP		1 1/4						
28RLPP		1 1/2						
30RLPP		2”						
41RLPP	#10	1/2	100	9,1	2,9	3.7 - 4.0	2	6,32
42RLPP		5/8						
43RLPP		3/4						
45RLPP		1”						
46RLPP		1 1/4						
47RLPP		1 1/2						
48RLPP		2”						
50RLPP	3”							
61RLPP	#12	3/4	100	10,7	3,35	4.3 - 4.8	3	9,94
63RLPP		1”						
64RLPP		1 1/4						
65RLPP		1 1/2						
66RLPP		2”						
71RLPP	1/4	1”	100	11,9	3,9	5.0 - 5.5	3	16
72RLPP		1 1/4						
73RLPP		1 1/2						
74RLPP		2”						
Zincado Negro								
N01RLPP	#4	3/8	100	5,3	1,7	2.3 - 2.5	1	1,46
N02RLPP		1/2						
N04RLPP		3/4						
N11RLPP	#6	3/8	100	6,6	2,1	2.7 - 3.0	2	2,7
N12RLPP		1/2						
N13RLPP		5/8						
N14RLPP		3/4						
N15RLPP		1”						
N22RLPP	#8	1/2	100	8,0	2,5	3.2 - 3.5	2	4,4
N23RLPP		5/8						
N24RLPP		3/4						
N26RLPP		1”						
N27RLPP		1 1/4						
N28RLPP		1 1/2						
N45RLPP	#10	1”	100	9,1	2,9	3.7 - 4.0	2	6,32
N47RLPP		1 1/2						
N48RLPP		2”						
N50RLPP		3”						